TELIKOU Intercom System WS-4A Two-Channel 4-Wire Speaker Station Instruction Manual


I. Introduction

Thank you for choosing TELIKOU intercom product. The WS-4A Two-channel 4-Wire recessed speaker station suitable for the situation which needs the equipment mounted in the wall.


This system adopts wired connection, and has following features, free of external emission interference, stable and reliable performance, flexible configuration, full-duplex communication, clear and loud communication sound, easy operation, and strong noise resistance.

II. Basic operations


WS-4A(G)Front Panel

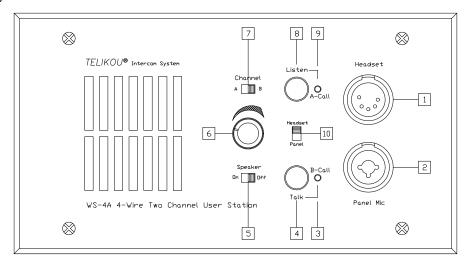

WS-4A(P)Front Panel

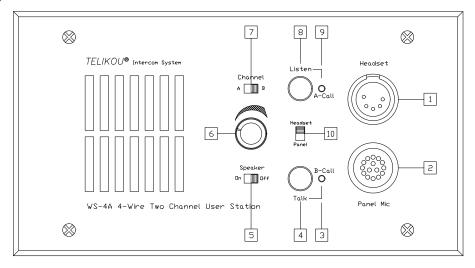

WS-4A Rear Panel

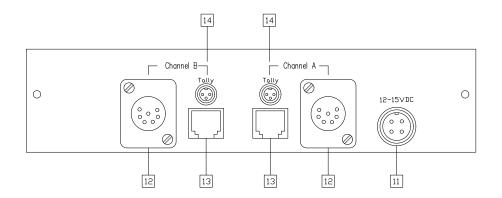

1. Headset connector

4-pin XLR Male or 5-pin XLR female connector

EARPHONE: Dynamic 50-2000 ohm

MICROPHONE: Dynamic 100-600 ohm

The wiring of headset is as follows:

Pin 1--Mic common

Pin 2--Mic hot

Pin 3--headphone common

Pin 4--headphone hot

Pin 5—Null

2. Panel Mic Connector

WS-4A(G) uses a double-purpose connector which supports XLR plug or 1/4inch plug unbalanced microphone.

The wiring of 3-pin XLR microphone is as follows:

Pin 1 -- Mic common

Pin 2 -- Mic hot

Pin 3 -- Null

WS-4A(P) uses an internal microphone.

3. Talk Light and B Channel Call Light

This LED lights Green when Talk button is pushed ON.

This LED lights Red when Pin7 of Channel B intercom cable receives a high level.

4. Talk Button (Talk)

PTT: Hold the button, when finish talking, release the button.

Latching: Single click (<200ms) talk button will latch the talk button.

Press again the talk button, will release the talk button.

5. Speaker Switch

The Speaker Switch turns the front panel speaker on or off.

6. Listen Level Control

This control adjust the audio level which heard from headset and speaker.

7. Channel Select Switch

WS-4A allows two different 4-wire system connected with station.

This switch selects which external system is using.

8. Listen Button

PTT: Hold the button and listen, then release the button.

Latching: Single click (<200ms) talk button will latch the listen button.

Press again the listen button, will release the listen button.

9. Talk Light and A Channel Call Light

This LED lights Green when Talk button is pushed ON.

This LED lights Red when Pin7 of Channel A intercom cable receives a high level.

10. Mic Select Switch

Set the Mic select switch to select whether the panel microphone or the headset microphone is active.

11. Power Connector

4-pin aviator socket

Pin 1 --- Ground

Pin 2 --- Null

Pin 3 --- Null

Pin 4 --- Power Output (12VDC)

12. Intercom Line connector

```
XLR-7M
```

Pin 1 --- Audio Output -

Pin 2 --- Audio Output +

Pin 3 --- Ground

Pin 4 --- Power Output (12VDC)

Pin 5 --- Audio Input -

Pin 6 --- Audio Input+

Pin 7 --- 5V Tally drive signal, or Call signal Input

13. Intercom Line connector

RJ-45, Pin 1-7 is parallel with XLR-7M connector

Pin 1 --- Audio Output -

Pin 2 --- Audio Output +

Pin 3 --- Ground

Pin 4 --- Power Output (12VDC)

Pin 5 --- Audio Input -

Pin 6 --- Audio Input+

Pin 7 --- 5V Tally drive signal, or Call signal Input

Pin 8 --- 5V Tally drive signal

14. Tally Connector

Clockwise along anchor point.

Pin 1 --- Ground

Pin 2 --- Green Light

Pin 3 --- Red Light

III. Installation and cable

WS-4A supplies wall mount case and desktop case.

Front panel size: (W)210mm x (H)114mm x (D)3.5mm

A hole of size 210mm wide, 114mm high and 54mm deep is needed for the installation of WS-4A. Four 5mm fix holes are set evenly. The distance between any two holes is 144mm on width direction and 92mm on height direction.

VI. Technical Specification

BANDWIDTH:

300Hz-4000Hz

EARPHONE:

Dynamic 50-2000 ohm

MICROPHONE:

Dynamic 100-600 ohm

POWER SUPPLY:

12VDC, <0.5A

ENVIRONMENTAL:

0° - 70°C (32°-158°F)

DIMENSION:

8.27" (W) x4.49" (H) x2.13" (D), 210mm x 114mm x 54mm

WEIGHT:

0.56kg